



Instruction Manual



 
V Racers Race Track



INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers® V Racers Race Track**.


Race and chase through different courses to encourage role-play fun and imaginative play!

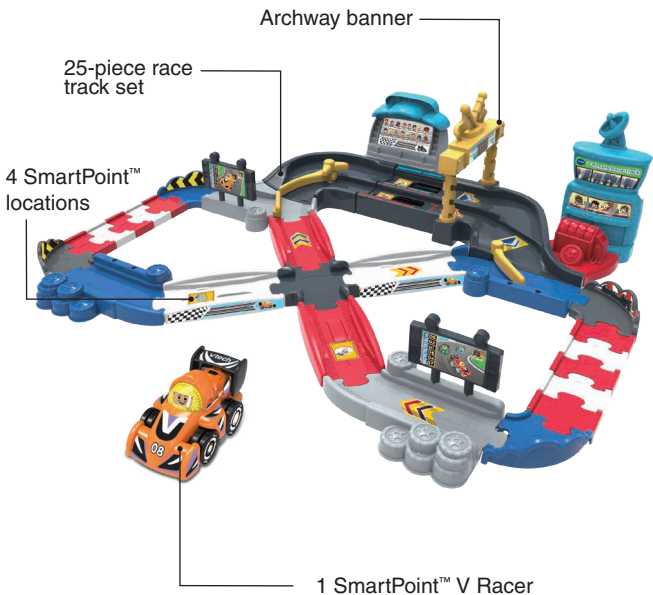

INCLUDED IN THE PACKAGE



 
One SmartPoint™
V Racer

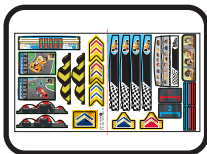

One label sheet



 One quick start guide

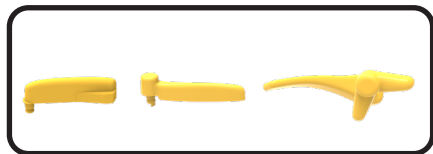


Three gate switches



One stand roof



 
One stand

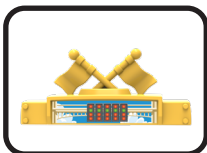

One archway banner



 
Two archway supports

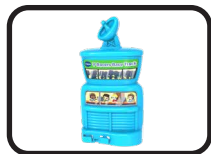


One pressroom



 Two score boards

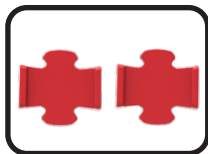

Two male 1/4
straight tracks

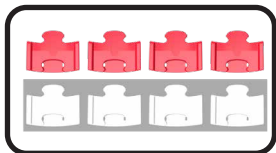 

Eight 1/4 straight tracks



Four female
90-degree tracks



A



B



C



D



 
E



F



G

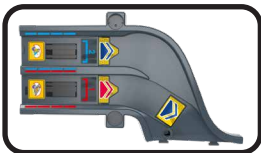

H



I



J



K



 
L

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this guide as it contains important information.

Unlock the packaging locks:

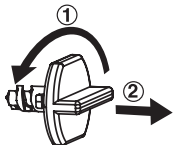


- ① Turn the packaging locks anticlockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

Battery Removal and Installation - V Racer

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the **V Racer**. Use a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 1 new 1.5V AAA (AM-4/LR03) battery following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.).
5. Replace the battery cover and tighten the screw to secure.

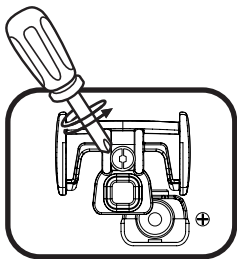

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

 
 
www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION


Please stick the labels to the play set securely as indicated on the following page:

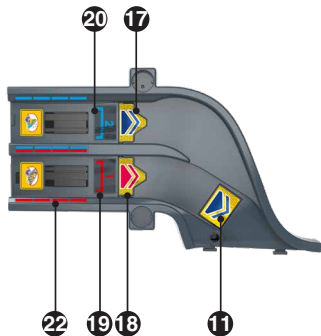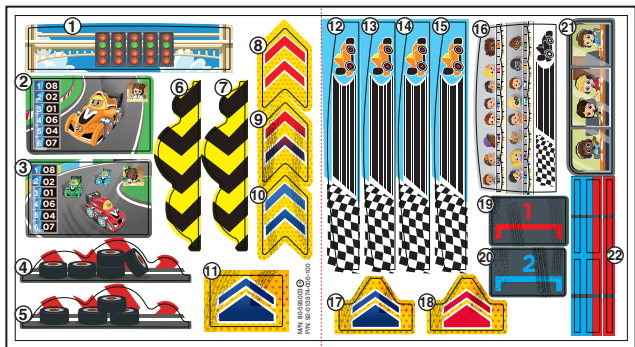





ASSEMBLY INSTRUCTIONS

 With the **VTech® Toot-Toot Drivers® V Racers Race Track**, safety comes first. To ensure your child's safety, adult assembly is required.


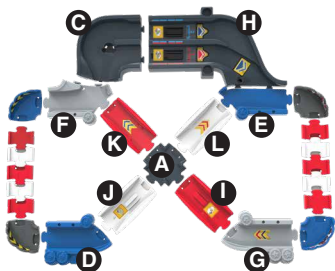


Assemble and attach the track components following the steps below:

  
1. Attach Track C to H to form the starting line. Then attach E and F to the track as shown below.

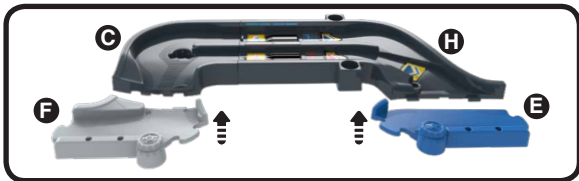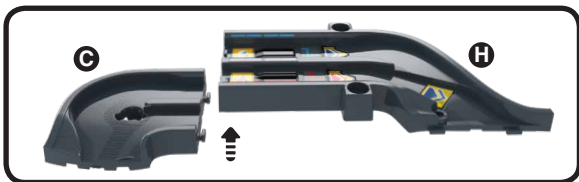

 
 
2. Connect four female 90-degree tracks, eight 1/4 straight tracks and two male 1/4 straight tracks as shown below.

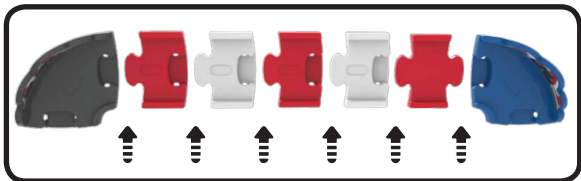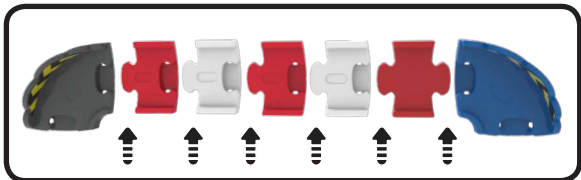


3. Attach track D and track G to one end of each track line and connect Track E and Track F to the other ends, as shown below.

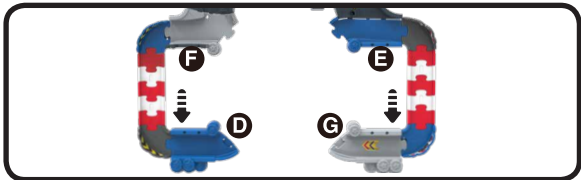 

  4. The positions of tracks I, J, K and L can be changed freely by changing the direction of track A.

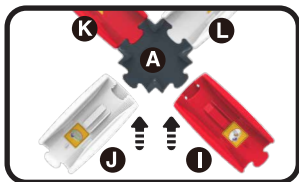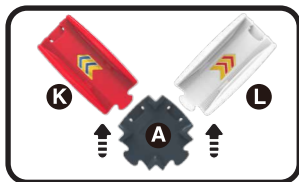

 
5. Complete the race track with the cross-shape track, as shown below.

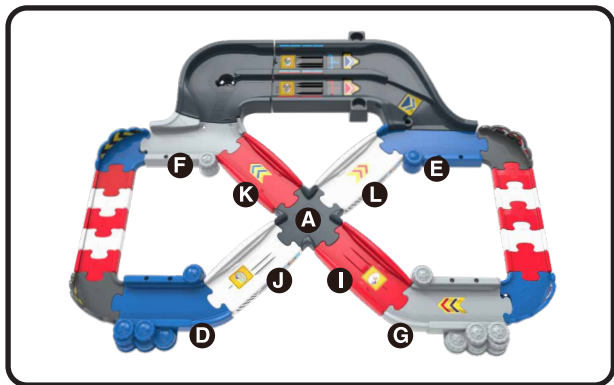


6. Attach the stand roof to the stand, track B to the pressroom, and the archway banner to the archway supports, as shown below.





  7. Attach the stand to the C & H, track B to H, and the archway supports to Track H, as shown below.

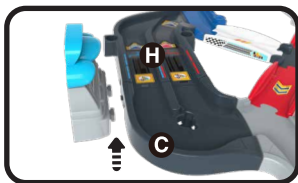

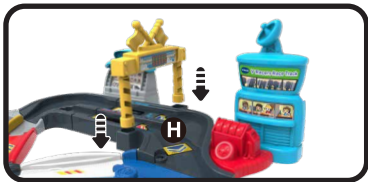

8. Attach the three gate switches and two score boards to the track, as shown below.

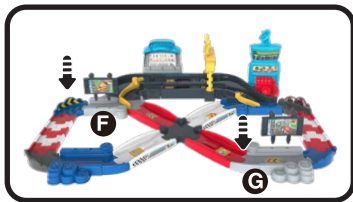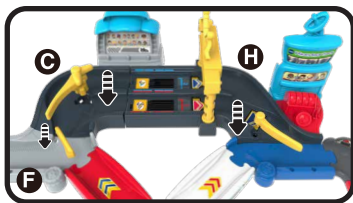  

Once you've completed the above steps, you are ready to play! Race the vehicles in the direction of the arrows.

 


PRODUCT FEATURES

V Racer

1. ON/OFF SWITCH

To turn the unit **On**, slide the **On/Off Switch** to the **On** (⏻) position.
To turn the unit **Off**, slide the **On/Off Switch** to the **Off** (●) position.

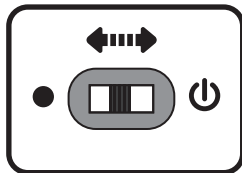


2. AUTOMATIC SHUT-OFF

To preserve battery life, the **V Racer** will automatically power-down after approximately **60** seconds without input. The unit can be turned on again by pressing the **Light Up Face Button**, rolling the **V Racer** quickly, or by triggering a SmartPoint™ location.

ACTIVITIES

 1. Slide the **ON/OFF SWITCH** to turn the unit **ON**. You will hear sounds, a song and a phrase. The light will flash with the sounds.

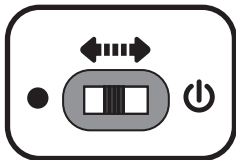

2. Press the **LIGHT UP FACE BUTTON** to hear sounds, songs, phrases and melodies. The light will flash with the sounds.



3. Manipulate the moving part on the V Racer by hand to activate a mechanical function on the vehicle and hear fun sounds. The light will flash with the sounds.



4. Push the vehicle to hear fun sounds. While a melody is playing, push the vehicle again to add in fun sounds on the top of the melody. The light will flash with the sounds.



5. For added fun, the vehicle interacts with **VTech® Toot-Toot Drivers®** tracks. Simply roll the vehicle over one of the tracks' SmartPoints™ to see the light flash and to hear greetings & fun sounds, short tunes and sing-along songs (Additional tracks sold separately.)



MELODY LIST

1. Clementine
2. Mulberry Bush
3. Sailing Sailing
4. Pease Porridge
5. Hey Diddle Diddle
6. Humpty Dumpty

SONGS

Song 1

On the straight I zoom so fast,
On the corners I'll speed right past!

Song 2

I'm the king of the curve, leader of my team.
I power on and on to fulfil my dream!

Song 3

Toot-Toot Drivers.
I'm a Toot-Toot Drivers Race Car.
Ready to show off. (Toot-Toot)
I'll round this curve and zoom right off!
Let's Go! Go! and see (Toot-Toot).

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

