

**vtech**<sup>®</sup>

# User's Manual

## Magic Star Learning Table™



© 2016 VTech  
Printed in China  
91-003028-000 US

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**<sup>®</sup> created the **Infant Learning**<sup>®</sup> series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**<sup>®</sup>'s **Infant Learning**<sup>®</sup> toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**<sup>®</sup>

To learn more about **VTech**<sup>®</sup> toys, visit [vtechkids.com](http://vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Magic Star Learning Table™** learning toy!

The **VTech® Magic Star Learning Table™** is a fully bilingual activity table that features six fun learning activities that encourage your child to explore while helping to develop fine motor skills. Press the buttons, turn the steering wheel and flip the page to discover colors, letters, numbers and more.

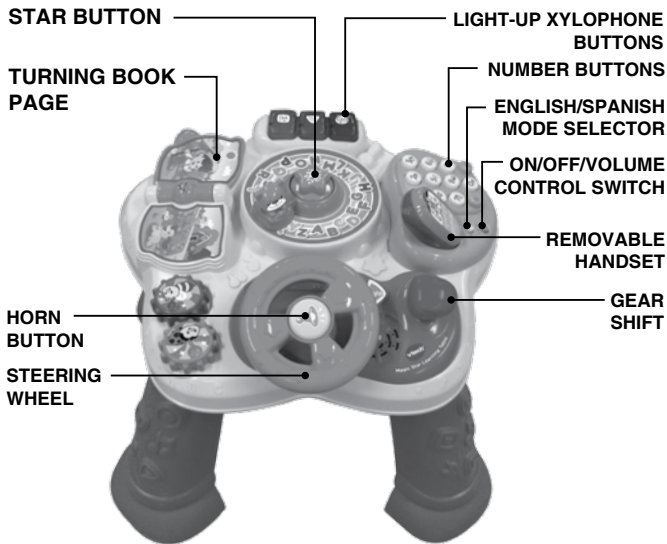


# INCLUDED IN THIS PACKAGE

- One VTech® Magic Star Learning Table™ learning toy
- One user's manual
- One phone
- Four table legs

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

 **NOTE:** Please keep user's manual as it contains important information.

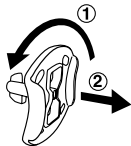


- ① Rotate the packing locks 90 degrees counter-clockwise
- ② Pull out the packing locks

# GETTING STARTED
 
## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

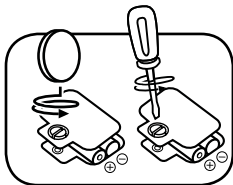


## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# ASSEMBLY INSTRUCTIONS

With the VTech® Magic Star Learning Table™ safety comes first. To ensure your child's safety, adult assembly is required.

 
1. Insert the four legs into the slots on the bottom of the activity panel.

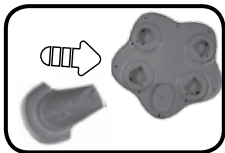

## PRODUCT FEATURES


### 1. ON/OFF/VOLUME CONTROL SWITCH

 To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) or **HIGH VOLUME** (🔊) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.

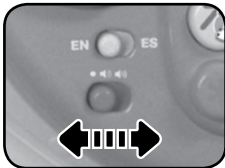

### 2. ENGLISH/SPANISH MODE SELECTOR SWITCH

 To select the desired language, slide the **ENGLISH/SPANISH MODE SELECTOR SWITCH** to the **ENGLISH MODE (EN)** position or the **SPANISH MODE (ES)** position.

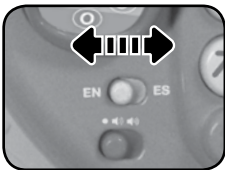

### 3. AUTOMATIC SHUT-OFF

 
To preserve battery life, the VTech® Magic Star Learning Table™ will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

# ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a playful sound, a song and a fun phrase. The lights will flash with the sound.



2. Slide the **English/Spanish mode selector switch** to choose which language you want to play in. You will hear a playful sound, a song and a fun phrase. The lights will flash with the sound.

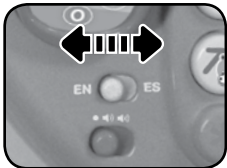

3. Press the **star button** to hear fun sounds, a phrase, a random melody or a song. The lights will flash with the sound.



4. Press the **number buttons** once to learn numbers. Press any of the number buttons two or more times quickly to hear an animal sound and fun phrase. The lights will flash with the sound.



5. Pick up the **handset** or place the handset in the cradle to hear fun sounds and playful phrases. When the handset is placed in the cradle you will receive a call from one of the animals, if no other buttons are pressed. The lights will flash with the sound.



6. Turn the **steering wheel** to hear fun sounds, playful phrases or a melody. When a melody is playing, turn the steering wheel to hear fun sounds or phrases play over the melodies, or press the number buttons or horn button to hear fun sounds play over the melodies. The lights will flash with the sound.



7. Press the **horn button** to hear a fun horn sound. Hold down the horn button to hear a long horn sound. The lights will flash with the sound.



8. Pull or push the **gear shift** to hear fun phrases, sounds or short tunes. The lights will flash with the sound.





9. Turn the **book page** to hear fun songs. The lights will flash with the sound.



10. Press the **light-up xylophone buttons** to hear fun sounds and learn colors and shapes. Press the xylophone buttons quickly to hear individual xylophone sounds. When a melody is playing, press the xylophone buttons to play the melody one note at a time. The lights will flash with the sound.



11. Turn the gears to hear fun mechanical sounds.



## MELODY LIST:

1. Animal Fair
2. The Bear Went Over the Mountain
3. Take Me Out to the Ballgame
4. The Alphabet Song
5. Yellow Rose of Texas
6. Teddy Bears' Picnic
7. Old King Cole
8. Yankee Doodle
9. Sing a Song of Sixpence
10. Here We Go Looby Loo

# SONG LYRICS

## SONG 1

Boys and girls come out to play,  
There's lots to play with and songs to sing!

## SONG 2

There was a farmer had a dog,  
And Bingo was his name-o.  
B-I-N-G-O, B-I-N-G-O, B-I-N-G-O.  
And Bingo was his name-o!

## SONG 3

Old MacDonald had a farm, E-I-E-I-O.  
On his farm he had a pig, E-I-E-I-O.  
"Oink oink" here. "Oink oink" there,  
Here an "Oink", there an "Oink", everywhere an "Oink oink".  
Old MacDonald had a farm, E-I-E-I-O.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
  2. Interrupt the power supply by removing the batteries.
  3. Let the unit stand for a few minutes, then replace the batteries.
  4. Turn the unit **ON**. The unit should now be ready to play again.
  5. If the product still does not work, replace with a new set of batteries.
- If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

### **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.


This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech .

**vtech**<sup>®</sup>

Manual de  
instrucciones

# Magic Star Learning Table™



© 2016 VTech  
Impreso in China  
91-003028-000 

*Queridos padres:*

*En VTech® sabemos que los niños tienen la capacidad de hacer grandes cosas. Esta es la razón por la que nuestros juguetes electrónicos educativos se diseñan de tal modo que ayudan a desarrollar y estimular la inteligencia de los niños y les permiten aprender y ejercitar numerosas habilidades. Ya sea para aprender letras o números, identificar colores y figuras, o estimular los sentidos con música y luces, todos los productos educativos de VTech® incorporan avanzadas tecnologías y están adaptados al currículo escolar para motivar a los niños de todas las edades a alcanzar su máximo potencial.*

 
*Para más información sobre nuestros productos visite:*

*[vtechkids.com](http://vtechkids.com)*

# INTRODUCCIÓN

¡Gracias por comprar **Magic Star Learning Table™** de **VTech®** !

Con esta mesita de actividades bilingüe el niño descubrirá numerosos contenidos desarrollando diferentes habilidades. Pulsar botones, pasar la página, descubrir colores, letras, números y mucho más.

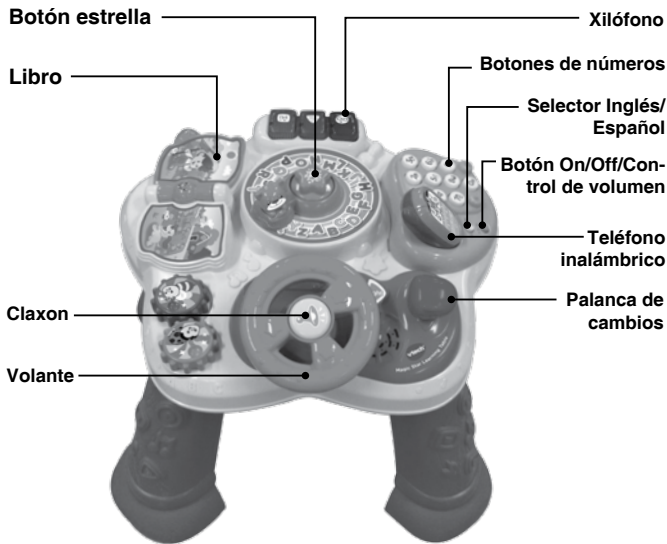

# INCLUIDO EN EL EMBALAJE

 
- Un juguete **Magic Star Learning Table™** de VTech®.
- Un manual de instrucciones
- Un teléfono
- 4 patas para montar la mesita

**ADVERTENCIAS:** Todos los materiales de este embalaje, tales como cintas, hojas de plástico, alambres y etiquetas, no son parte de este juguete y deberían ser desechados para la seguridad de su hijo.

Usar bajo la vigilancia de un adulto.

**NOTA:** Conserve el manual. Contiene información importante.


## SISTEMA DE SUJECIÓN EN EL EMBALAJE:



- ① Gire el sistema de sujeción en sentido contrario a las agujas del reloj.
- ② Tire de él hacia afuera, ya no lo necesitará más.

## INSTALACIÓN DE LAS PILAS

 1. Asegúrese de que el juguete está apagado.
2. Localice el compartimento de las pilas en la parte posterior del juguete. Use una moneda o un destornillador para retirar los tornillos que aseguran la tapa de las pilas.
3. Coloque dos pilas AA (AM-3/LR6) nuevas según muestra el dibujo. Se recomienda el uso de pilas alcalinas para un mejor rendimiento del aparato.
4. Coloque de nuevo la tapa y cierre el compartimento, asegurándose de que el tornillo está suficientemente apretado, para que el pequeño no pueda acceder a las pilas.

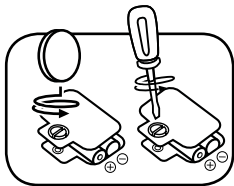




# ADVERTENCIA

- Se recomienda el uso de pilas alcalinas o pilas recargables (Ni-MH) con carga completa de alta calidad para un mejor rendimiento.
- Utilice únicamente el tipo de pilas recomendadas.
- No mezcle pilas nuevas y viejas.
- No utilice pilas de diferentes tipos.
- Reemplace todas las pilas cada vez que se cambien.
- No utilice pilas deterioradas.
- Instale las pilas correctamente respetando los signos de polaridad (+, -) para evitar cualquier tipo de fuga.
- No se debe provocar cortocircuitos en los bornes de una pila.
- Las pilas deben ser instaladas por un adulto o bajo su supervisión.
- Retire las pilas usadas del juguete.
- Extraiga las pilas cuando no se vaya a utilizar el juguete durante un largo periodo de tiempo.
- No acerque ni tire las pilas al fuego.
- No intente recargar pilas normales.
- Retire las pilas recargables del juguete para su carga.
- Se debe recargar las pilas recargables siempre bajo la vigilancia de un adulto.

# INSTRUCCIONES DE MONTAJE

Para **VTech**® la seguridad de su hijo es lo primero, por eso, requerimos que el montaje de este juguete sea realizado por un adulto.

 
1. Inserte las cuatro patas en los espacios habilitados para ello de la unidad principal.

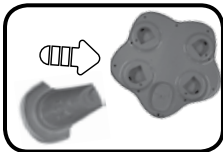

## CARACTERÍSTICAS


### 1. Botón ON/OFF/Control de volumen

 Para encender el juguete, mueva este selector a la posición volumen bajo ( ) o hacia la posición de volumen alto ( ). Para apagarlo, deslice el interruptor a la posición ( ● ).

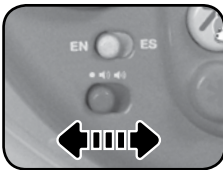

### 2. Selector de idioma: English/ Español

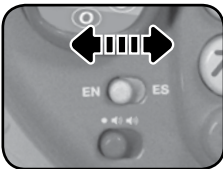 

Para seleccionar el idioma deslice el selector a la posición de **EN** si desea seleccionar el idioma inglés y hacia la posición **ES** si desea seleccionar el idioma español.



### 3. Desconexión automática

Para preservar la duración de las pilas, **Magic Star Learning Table™ VTech**® se desconecta de forma automática tras unos segundos de inactividad. Pulse cualquier botón para volver a encenderlo.

# ACTIVIDADES

1. Deslice el botón ON/OFF a la posición volumen bajo (  ) o hacia la posición de volumen alto (  ). Para apagarlo, deslice el interruptor a la posición ( ● ).



2. Deslice el selector de idioma English/ Español al que desee. Escuchará un sonido, una canción y una frase divertida. Todo acompañado de luces.



3. Pulse el botón de la estrella para escuchar sonidos divertidos, una frase, una melodía o una canción. Todo acompañado de luces.



4. Pulse sobre los botones de números para aprenderlos. Pulse rápidamente cualquier número dos o más veces para escuchar el sonido de un animal y una frase divertida. Todo acompañado de luces.



5. Descuelgue el teléfono para escuchar divertidos sonidos y frases. Cuando el teléfono esté colocado en su sitio, recibirá una llamada de un animal si no se presionan otros botones. Las luces acompañarán.



6. Gire el volante para escuchar sonidos y frases divertidas o una melodía. Cuando la melodía esté sonando, si gira el volante se escucharán otras frases por encima de la melodía o números si se presionan los botones o el sonido del claxon.



7. Pulse el botón del claxon para escuchar su sonido. Si mantiene pulsado el botón, el sonido del claxon será más prolongado. Todo acompañado de luces.



8. Mueva la palanca de cambios para activar divertidas frases y sonidos. Todo acompañado de luces.



9. Pase las páginas del libro para escuchar algunas divertidas canciones. Todo acompañado de luces.



10. Pulse los botones del xilófono para escuchar divertidos sonidos y aprender colores y formas.



11. Gire las tuercas para escuchar divertidos sonidos.



## Canciones

### Canción 1

Ya es hora de jugar,  
con tus amigos, te divertirássss.

### Canción 2

Yo tenía una granja ia ia o,  
Vacas, cerdos y ovejitas, ia ia o.  
Yo tenía una granja ia ia o.

### Canción 3

Había un perro en una granja,  
y se llamaba Bingo.

# CUIDADO Y MANTENIMIENTO

1. Limpie el juguete con un paño suave ligeramente húmedo. No utilice disolventes ni abrasivos.
2. Manténgalo lejos de la luz directa del sol o de cualquier otra fuente de calor.
3. Quite las pilas cuando el juguete no vaya a ser utilizado durante un largo periodo de tiempo.
4. No deje caer la unidad sobre superficies duras, ni la esponja a la humedad o al agua.
5. No trate de reparar la unidad ni desmontar el producto.

# SOLUCIÓN DE PROBLEMAS

Si por alguna razón la unidad deja de funcionar o lo hace con irregularidad, por favor, siga estos pasos:

1. Apague el juguete.
2. Quite las pilas.
3. Deje que la unidad repose durante unos minutos, después, vuelva a poner las pilas.
4. Encienda el juguete, ahora debería funcionar.
5. Si el producto sigue sin funcionar, utilice pilas nuevas.

Si el problema persiste, por favor, póngase en contacto con el departamento de atención al cliente en el teléfono 1-800-521-2010 en EE.UU o 1-877-352-8697 en Canadá.



PRODUCTO  
LED CLASE 1