

BC8313 V-Hush Pro Soothing Sleep Trainer




vtech® Quick Start Guide

TECHNICAL SPECIFICATIONS

Frequency	2402 - 2480 MHz Maximum power used by the transmitter: 0.1W (100mW)
Channels	79
Nominal effective range	Actual operating range may vary according to environmental conditions at the time of use.
Power requirements	Soothing power adaptor: Input: 100-240V~50/60Hz 0.5A; Output: 5V DC 1.5A -OR- Output: 5V DC 2A Integral, non-user replaceable Li-ion battery: 3.6V, 2600mAh

WHAT'S IN THE BOX

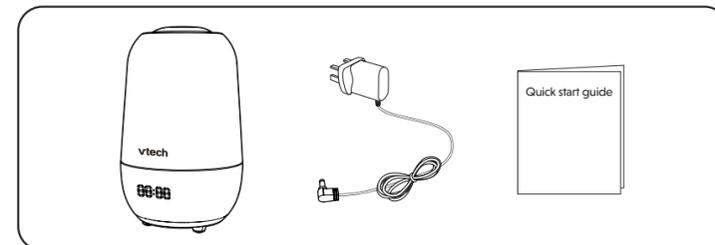

IMPORTANT SAFETY INSTRUCTIONS

- The applied nameplate is located at the bottom of the soother's base.
When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
- Follow all warnings and instructions marked on the product.
 - Adult setup is required.
 - This product is not a substitute for adult supervision of the infant. Supervising the infant is the parent's or caregiver's responsibility. This product could cease operating, and therefore you should not assume it will continue working properly for any given period of time. Further, this is not a medical device and should not be used as such.
 - Do not use this product near water, for example, near to a bath, sink, swimming pool or shower.
 - CAUTION:** The battery cannot be subjected to extreme low or high temperatures, low air pressure or high altitude during use, storage or transportation. Disposal of batteries in a fire, hot oven, mechanically crushing or cutting could result in an explosion. Exposing batteries to an extremely high temperatures or extremely low air pressures may result in an explosion and the leakage of flammable liquids and gasses.
 - Use only the adaptors included with this product. Incorrect adaptor polarity or voltage can seriously damage the product.
 - CAUTION:** Power adaptor information:
Input: 100-240V~50/60Hz 0.5A Output: 5V DC 1.5A
Vtech Telecommunications Ltd.
Model: VT07EUK05150
-OR-
Input: 100-240V~50/60Hz 0.5A Output: 5V DC 2A
Vtech Telecommunications Ltd.
Model: VT07EUK05200
 - CAUTION:** Rechargeable battery information:
Zhuhai Great Power Energy Co., Ltd
Li-ion battery: 3.6V, 2600mAh, 9.36Wh;
Model: ICR18650-2.6Ah-3.6V-1S1P
 - The power adaptors are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
 - For pluggable equipment, the socket-outlet should be installed near the equipment and should be easily accessible.
 - Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
 - Do not cut off the power adaptors to replace them with other plugs, as this causes a hazardous situation.
 - Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
 - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company. Do not overload wall outlets or use an extension cord.
 - Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
 - This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat source.
 - Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
 - To reduce the risk of electric shock, do not disassemble this product, but take it to an authorised service facility. Opening or removing parts of the product other than specified access

- doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
- Periodically examine all components for damage.
- There is a very low risk of privacy loss when using certain electronic devices, such as baby monitors, cordless telephones, etc. **To protect your privacy, make sure the product has never been used before purchase, reset the soother periodically by powering off and then powering on the unit, and power off the soother if you will not use it for some time.**
- Children should be supervised to ensure that they do not play with the product.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

- Cautions**
- Use and store the product at a temperature between 0°C and 40°C.
 - Do not expose the product to extreme cold, heat or direct sunlight. Do not place the product close to a heating source.
 - Warning—Strangulation Hazard—Children have STRANGLED in cords.** Keep this cord out of the reach of children (more than 3 ft (0.9m) away). Do not remove this tag.
 - Never place the soother inside the baby's cot or playpen. Never cover the soother with anything such as a towel or a blanket.
 - Other electronic products may cause interference with your soother. Try installing your soother as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.
 - Do not allow your child or anyone to look directly into the projector lens while it is turned on to avoid possible eye damage.

Precautions for users of implanted cardiac pacemakers
Cardiac pacemakers (applies only to digital cordless devices):
Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

- Pacemaker patients**
- Should keep wireless devices at least six inches from the pacemaker.
 - Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.


Electromagnetic fields (EMF)
This Vtech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

1A CONNECT AND CHARGE THE SOOTHER

NOTES


- The rechargeable battery in the Soother is built-in.
- Only use the power adaptor supplied with this product.
- If the Soother is connected to a switch controlled electric outlet, make sure the switch is on.
- Connect the power adaptor in a vertical or floor mount position only. The adaptor prongs are not designed to hold the weight of the Soother. Do not connect the adaptor to a socket that could cause damage to the prongs or prevent the adaptor from connecting properly to the outlet.
- Make sure the Soother and the power adaptor cord are out of reach of children.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life, the whole luminaire shall be replaced.

Connect the power adapter to the soother and a power supply, then the soother powers on automatically.

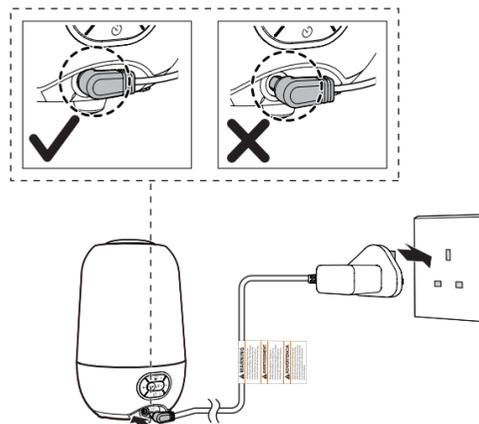

1B POWER ON THE SOOTHER

Press the **Power** switch to power your soother on when the soother is not connected to the power supply.

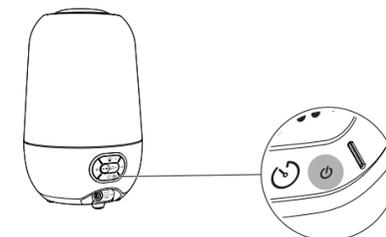

2 BEFORE USE

Positioning the Soother


- Place the Soother more than 1 metre away from your baby.

CAUTION

- Keep the Soother out of the reach of your baby. Never place the Soother inside the baby's cot or playpen.

NOTE

- To avoid interference from other electronic devices, place your Soother at least 1 metre away from devices such as wireless routers, microwaves, mobile phones and computers.

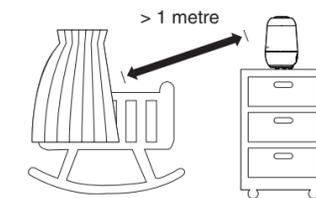

DOWNLOAD THE APP

Download MyVtech Soother App for more premium features

Download **MyVtech Soother App** to your mobile device from Apple Store or Google Play store to gain full access of features and conveniently control your Soother. Put advanced functions to action, like customizing a routine, with just a few taps of the finger. With **MyVtech Soother App**, you can pamper your baby.

TIP

- Make sure your mobile device meets the minimum requirements for the mobile app.

NOTE

- The mobile app is compatible with:
- Android™ 6.0 or later; and
 - iOS 12 or later.

Step 1

Install MyVtech Soother App

- Browse the App Store or the Google Play store .
- Search for the mobile app with the keyword **"MyVtech Soother"**.
- Download and install the **MyVtech Soother App** to your mobile device.

-OR-


Scan the QR code below to install the app.



APP FEATURES



3 OVERVIEW

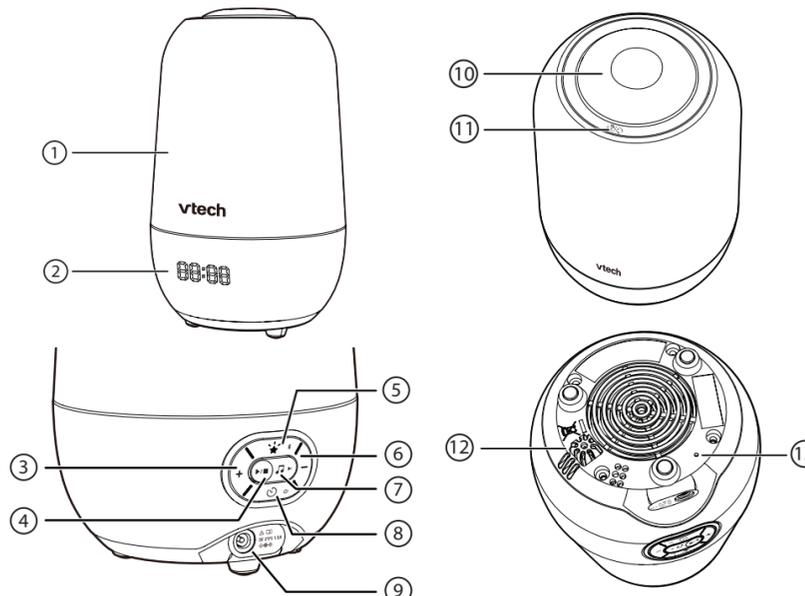

- Night light**
- Digital display**
- + VOLUME**
 - Press to increase the Soother speaker volume.
- ▶/■ Play/Stop**
 - Press to play the audio and press again to stop playing.
- ★ Projection light On/Off key**
- ✳ Bluetooth pairing key**
 - Press and hold for 5 seconds to enter the Bluetooth pairing mode.
- VOLUME**
 - Press to lower the Soother speaker volume
- 🎵 Audio key**
 - Press and hold to change between 4 different modes including soothing sound, lullaby, classical music and storytelling.
 - ▶ Skip
 - Press to skip to the next track.
- 🔌 On/Off switch**
 - Press and hold to turn on or turn off the Soother.
- ⌚ Timer**
 - Press to select the time interval options and release to start the countdown.
- 🔌 Power jack**
- 📡 Projection light**
- 🌡️ Magic key**
- 🌡️ Temperature sensor**
- 🔄 RESET key**

USING THE SOOTHER

Projection Light

The projection light is located on top of the Soother, offering 6 selectable patterns for your baby. The selected pattern will be projected on the ceiling at an angle.


Turn on or turn off the projection

- Press the **Film projection On/Off key**  to turn on or turn off the projection.

Adjust the projection angle

- Tilt the projection light lens manually to try out different angles then pick the one which suits your baby the best.

- Adjust your Soother's position with the projection light to help soothe your baby to sleep. For optimal performance, place the Soother in an upright position.

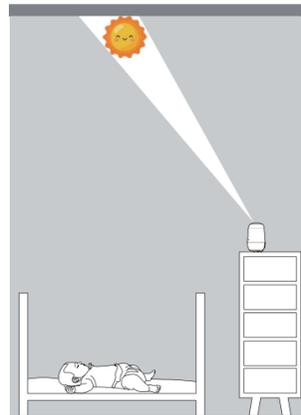

Magic Key

Several functions can be performed using the **Magic key**  located on the top of the Soother.

Start or stop the Soother

- When inactive, tap the **Magic key**  to start and resume the Soother to its previous settings.
- When active, tap the **Magic key**  to stop the Soother.



Change your favorite mode

- Tap the **Magic key**  twice to go to the next favorite mode.

Adjust the night light brightness

With the night light, the Soother can illuminate a soft hue to calm your baby in a dark room. You can control the brightness level of the glow directly from the Soother and adjust the night light colour remotely in **MyVTech Soother App**.

- Tap and hold the **Magic key**  to adjust the night light brightness level.

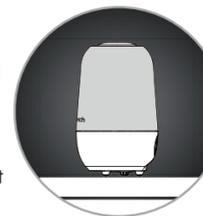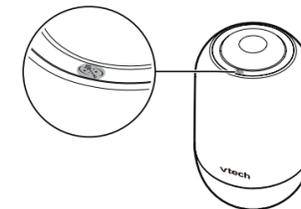

Audio Player

A selection of audio content comes in handy, including soothing sounds, lullabies, classic music and stories. All sounds come pre-stored in the Soother.

Play or stop the audio

- Press  to play sounds, music or stories and press again to stop playing.

Change the audio mode

- Press and hold  to select between 4 different modes in the following sequence.
 - Soothing sound
 - Lullaby
 - Classical music
 - Storytelling



Skip an audio

- Press  to skip the current song and play the next one.

Adjust the volume

- Press  or  to increase or decrease the volume.

CAUTION

- Beware of the speaker volume. For ear protection, the maximum volume is set to **Level 6** by default (**Level 1** - the lowest to **Level 10** - the highest). If you want to set the volume level higher than **Level 6**, you can adjust it in **MyVTech Soother App**.

NOTES


- When an audio is playing, two letters before the colon will be shown on the digital display. It represents the audio mode you are currently in and the track currently playing.
 -  stands for Lullaby mode.
 -  stands for Classical music mode.
 -  stands for Storytelling mode.
 -  stands for Soothing sound mode.

Auto-off Timer

While the Soother is playing a story, lullaby, classical music or soothing sounds, the auto-off timer feature helps you automatically stop the projection, light and sounds from playing after 30, 60, 120, 180 or 240 minutes.


Set auto-off timer

- Toggle  to select timer options **OFF**, **30 minutes**, **60 minutes**, **120 minutes**, **180 minutes** or **240 minutes**.
- Stop pressing  to start the countdown.
- Toggle  back to **OFF** to stop countdown.

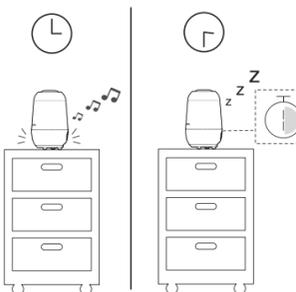

Temperature and Time

Once the Soother is turned on, the room temperature is detected automatically. The measurement is shown on the digital display alternately with the clock. The Soother clock will synchronise with your mobile device after pairing.

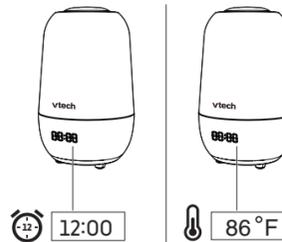


TIP

The following items can be adjusted from the **MyVTech Soother App**.

- Temperature format
- 12-hour or 24-hour time format
- Temperature and time rotation interval

Audio streaming from your mobile device

The Soother can function as a Bluetooth Speaker after pairing with a mobile device with Bluetooth, allowing your own music to be played through the Soother.

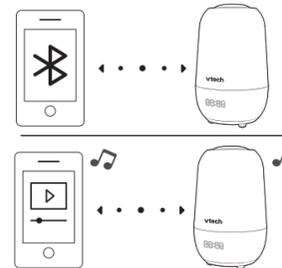

Connecting your Bluetooth device with the Soother using Bluetooth audio


To use a Bluetooth enabled mobile device with your Soother, you must first pair and connect your Bluetooth mobile device with the Soother. Before you begin, make sure that your Bluetooth enabled mobile device is not connected to any other Bluetooth device.

On the Soother

- Press and hold the Bluetooth pairing key  for 5 seconds to enter Bluetooth pairing mode.

On your device

- Set your mobile device to discoverable mode before pairing.
- Place your mobile device near the Soother during the whole pairing process.
- Select "VTech Soother" under the device list.

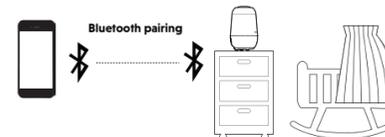

NOTE

- After the Soother enters Bluetooth pairing mode, the word **BLUE** will continue to flash on the digital display.

CUSTOMER SERVICE AND PRODUCT WARRANTY



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech.

- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe Plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe Plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- If the product covered by this warranty is damaged due to misuse, modification or unauthorized repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- This warranty is personal to the original purchaser and is not transferable.
- Breakages to the LCD screen are not covered by the warranty.
- Products returned to VTech Electronics Europe Plc, should be sent to the address shown below and packed carefully to avoid damage in transit. Please do not include batteries or adaptors. Please include details of the fault together with your name and address, contact phone number and/or email address.
- To keep an online record of your warranty, please register your product online at www.vtech.co.uk/clubvtech

VTech Electronics Europe Plc, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE
THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Ireland only. For products purchased outside the UK and Ireland, please contact your local distributor or place of purchase.

IMPORTANT

Please retain this booklet with your sales receipt as proof of the date of purchase.

Customer Service

Please call our Consumer Services Department on 03306 780149 (from UK) or +44 3306 780149 (outside UK) and a service representative will be happy to help you.

GENERAL PRODUCT CARE

To keep this product working well and looking good, please follow these guidelines:

- Avoid placing the Soother near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose the Soother to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- DO NOT immerse the Soother in water and do not clean it under running water.
- DO NOT use solvents, cleaning sprays or liquid cleaners.
- Clean with a soft damp cloth.
- Make sure the product is dry before you connect them to the mains again.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates that they must not be disposed of with domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

DECLARATION OF CONFORMITY

This product is intended for use within the UK.

This equipment complies with the essential requirements of the EU Radio Equipment Directive (2014/53/EU) and the UK Radio Regulations 2017 on Radio Systems and Telecommunication Equipment.

VTech Telecommunications Ltd. hereby declares that this V-Hush Pro Soothing Sleep Trainer BC8313 complies with the essential requirements and other relevant provisions of the EU Radio Equipment Directive (2014/53/EU) and UK Radio Equipment Regulations 2017.

The Declaration of Conformity for the BC8313 is available from <http://www.vtech.com/rtte-directive>.



STORAGE

When you are not intending to use the Soother for some time, store the product and the adaptor in a cool and dry place.

ADULT SUPERVISION

- This product should be for use by adults only.
- Do not place the product inside the cot or playpen.
- To ensure your children's safety, do not allow them to touch or play with the product or accessories. THIS IS NOT A TOY.

Credits:

The *Background Noise* sound file was created by Caroline Ford, and is used under the Creative Commons license.

The *Stream Noise* sound file was created by Caroline Ford, and is used under the Creative Commons license.

The *Crickets At Night* sound file was created by Mike Koenig, and is used under the Creative Commons license.

The *Heart Beat* sound file was created by Zarabadeu, and is used under the Creative Commons license.



Specifications are subject to change without notice.
© 2022 VTech Telecommunications Ltd.
All rights reserved. 05/22. BC8313_UK_QSG_V6